
INSTALLATION INSTRUCTION

TECHNICAL PARAMETERS

Model	VT-838	VT-838	VT-838
SKU	8964/8965	8960/8966	8967/8968
Base	E27	E27	E27
Max. Watts	60W	60W	60W
Input power	AC:220-240V, 50Hz		
IP Rating	IP44	IP44	IP44
Body type	Stainless steel + PC Diffuser		
Dimensions	76x110x450 mm	76x110x800 mm	76x110x1100 mm
Sensor type	PIR	PIR	PIR
Detection angle	100°	100°	100°
Detection range	2-8 m	2-8 m	2-8 m
Ambient light	2-200Lux	2-200Lux	2-200Lux
Time delay	5 sec to 5 min	5 sec to 5 min	5 sec to 5 min



INTRODUCTION AND WARRANTY

Thank you for selecting and buying the _____ product. _____ will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any other queries, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at their best. The warranty is valid for 3 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of the product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.

WARNING!

1. Please make sure to turn off the power before starting the installation.
2. Please make sure to turn off the power before changing the bulb and cleaning the device. 3. Proper grounding should be ensured throughout the installation.

4. Replace any cracked protective shield 
5. Installation must be performed by a qualified electrician.



This marking indicates that this product should not be disposed of with other household wastes.



Caution, risk of electric shock.

INSTALLATION DIAGRAM:

